



## FJ Cruiser basic Install guide

Please contact us if further assistance required





Thank you for choosing to equip your vehicle with our product which will evolve your 4x4 and provide you with the following great features:

- Our bumper is designed to follow the original lines and aesthetics of your vehicle.
- Your vehicles approach angle will be improved dramatically and also provide you with recovery points and increased vehicle protection.
- Our modular system allows you to replace parts individually.
- We do not cut the original plastic bumper, this it can be stored and reinstalled at any time.

Before commencing with the installation it is important that you read and understand these installation instructions. If you need any technical advice please contact you closest Rhino 4x4 dealer or contact us via [www.rhino4x4.com.au/contacts](http://www.rhino4x4.com.au/contacts)

# ***Attention***



**DO NOT** attach VFPS to the vehicle using any fixing points not intended for this purpose.

**DO NOT** use this product on any other vehicle make or model, other than those specified.

**DO NOT** remove the warning labels or Rhino 4x4 logo from the VFPS.

**DO NOT** modify the VFPS in any way.

If the customer or nominated agent chooses to self-install, or have the product(s) installed including any modification at a non-accredited Rhino4x4 Re-Seller/Workshop, Rhino4x4 is not responsible or liable for any loss suffered, including indirect or consequential damages caused to the vehicle during and arising from or in relation to such installation

Note: Ensure no pipes or cables contact the bar or moving parts. Ensure all pipes or cables are well insulated and fastened appropriately.


1. Remove front bumper bar, grill and bumper bar iron
2. Remove the cooler pipe bracket and discard



3. Relocate cooler pipe higher as per photo so that winch cradle can be located into position



4. Locate winch cradle and bumper assembly and fasten using existing fasteners on front of chassis.
5. Then locate and fasten the side plates using M10 and M12 bolts in side of chassis as per photos

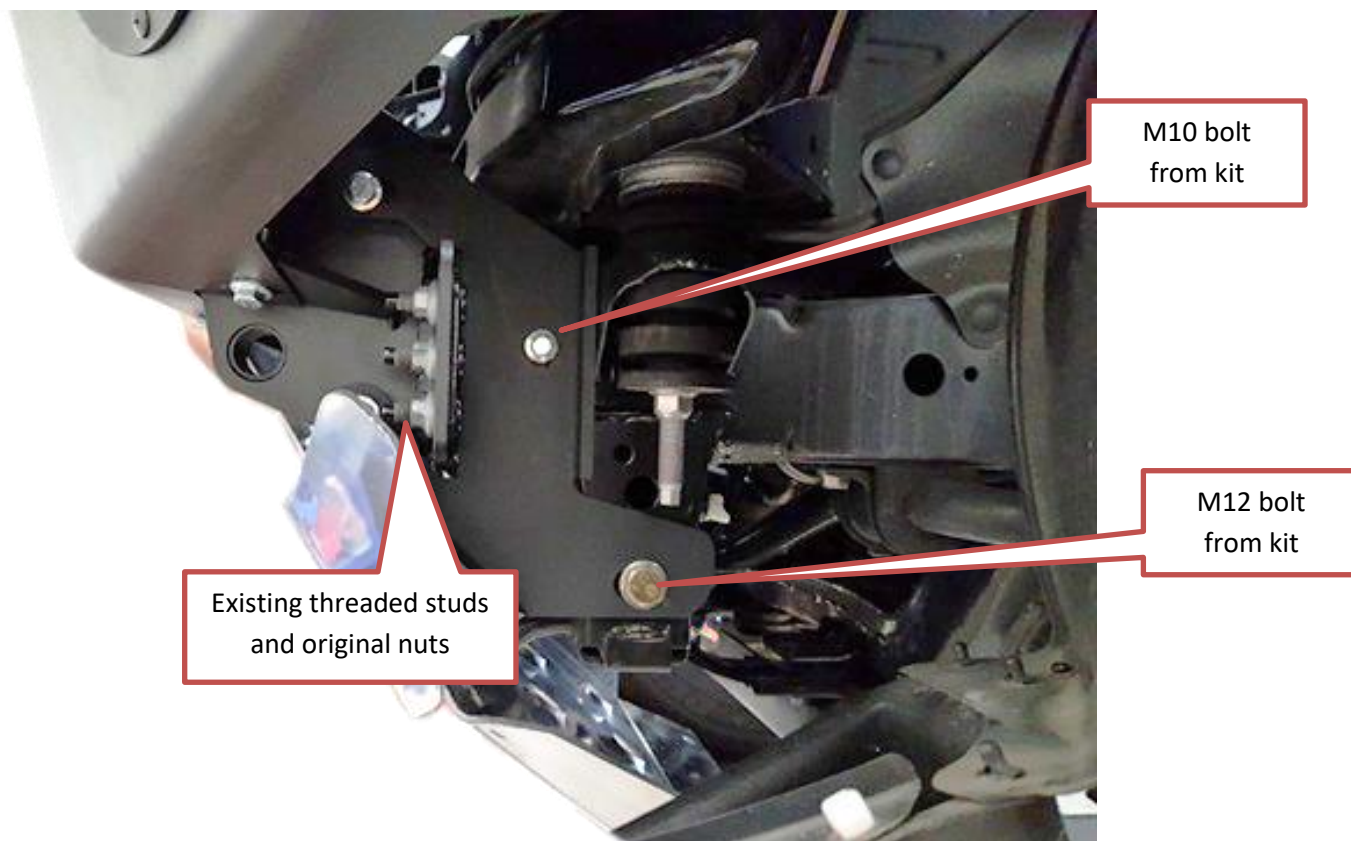

6. Locate and fasten light mounting bar using supplied M10 bolts into top of bar



7. Locate and fasten bash plate using three bolts in front and fasteners at rear.
8. Wheel arch liners will need to be trimmed and cable tied
9. Your kit includes a universal washer bottle. You can choose to install this in a location under bonnet that is free from accessories. Some choose to continue using existing washer bottle and paint black for visual aesthetics.
10. Plug in fog lights to existing wiring where optioned