


Fitting Instructions #5508IS

Toyota Landcruiser 300 Series

Rear Panhard Rod Bush Kit



- With rear panhard rod removed from vehicle, press original bushes out of the arm;
- * Grease the leading face of the bush, the inside of the arm, and then press the polyurethane bush into place;
- * Grease the inside of the polyurethane bush and the outside of the steel crush tube, then press the crush tube into the bush;

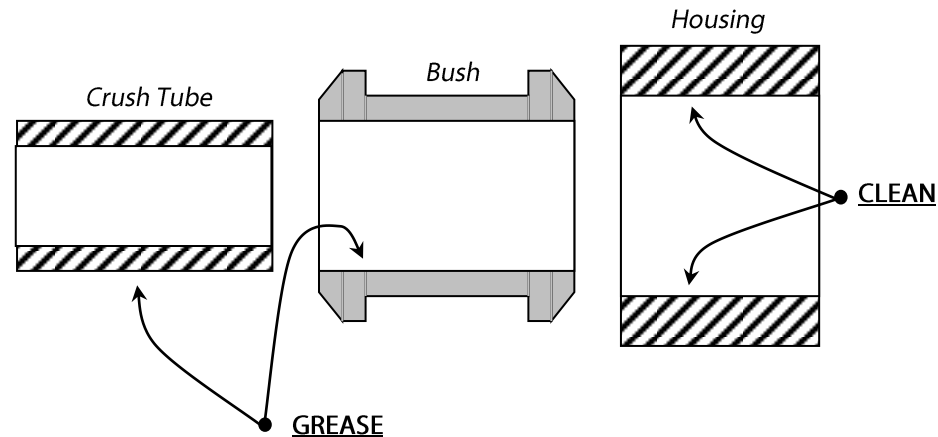

- Grease each end of the bush and mating metal components.
- Note: All surfaces of bushing that contact metal should be greased.