



GP Extended Motor Bolts G10001

Fitting Guide

Gigglepin Extended Motor Bolts




Tools Required:

- 10mm spanner
- 7.5mm Drill Bit
- Copper Grease (Or Similar)

Installation Guide:

Step 1:

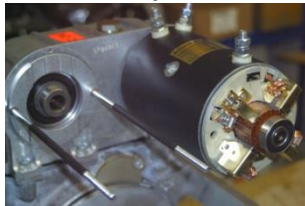

Step 2:



Step 3:



Remove motor bolts from packaging. Remove nuts, washers & "O" rings from motor bolts. Apply Copper Grease to coarse threaded end of bolts. Screw into winch housing until thread is no longer visible.

If using Bow Motor 1 or 2. Remove the motor end cap, take your 7.5mm drill bit and drill out the bolt holes in the brush mount plate. Re-fit the motor end cap.

Slide the motor over the motor bolts until the motor is home. Take the "O" Rings and fit one to each motor bolt, now fit the 2 flange nuts. Tighten flange nuts until motor is secure.

Using your 7.5mm drill bit, drill out the Albright Solenoid mounting bracket. Fit one M8 flat washer to each motor bolt & slide the solenoid on, then fit the second M8 flat washer to each motor bolt followed by the M8 Nyloc nut. Tighten Nyloc until solenoid is secure.

To wire your Albright solenoid please refer to instructions provided when purchased.

Tel: 0044 1732 463 600 **E-mail:** shop@gigglepin4x4.net **Web:** www.gigglepin4x4.net

Address: Unit 10 Gaza Trading estate, Scabharbour Road, Hildenborough, Kent, TN11 8PL - UK



GP Extended Motor Bolts G10001

Fitting Guide

Gigglepin Extended Motor Bolts




Tools Required:

- 10mm spanner
- 7.5mm Drill Bit
- Copper Grease (Or Similar)

Installation Guide:

Step 1:

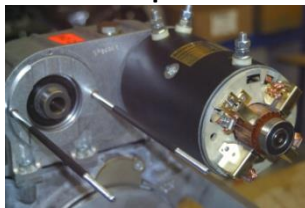

Step 2:



Step 3:



Remove motor bolts from packaging. Remove nuts, washers & "O" rings from motor bolts. Apply Copper Grease to coarse threaded end of bolts. Screw into winch housing until thread is no longer visible.

If using Bow Motor 1 or 2. Remove the motor end cap, take your 7.5mm drill bit and drill out the bolt holes in the brush mount plate. Re-fit the motor end cap.

Slide the motor over the motor bolts until the motor is home. Take the "O" Rings and fit one to each motor bolt, now fit the 2 flange nuts. Tighten flange nuts until motor is secure.

Using your 7.5mm drill bit, drill out the Albright Solenoid mounting bracket. Fit one M8 flat washer to each motor bolt & slide the solenoid on, then fit the second M8 flat washer to each motor bolt followed by the M8 Nyloc nut. Tighten Nyloc until solenoid is secure.

To wire your Albright solenoid please refer to instructions provided when purchased.

Tel: 0044 1732 463 600 **E-mail:** shop@gigglepin4x4.net **Web:** www.gigglepin4x4.net

Address: Unit 10 Gaza Trading estate, Scabharbour Road, Hildenborough, Kent, TN11 8PL - UK